

F1 1/4" PLY.
(DRILL FOR ENGINE
MOUNT BOLTS
BEFORE INSTALLING)

F2 1/4" PLY.

F3 1/8" PLY.

RIBS 1/16" SHT. 26 REQ.
TRIM SIX TO BROKEN LINE


TIPS 1/4" SOFT SHT.

*NOTE: FUSELAGE TOP NOT SHOWN THIS VIEW.

▼ = DENOTES 1/16" PLY. DOUBLER
MOVE SERVOS FORE OR AFT
FOR PROPER C.G.

*NOTE: FUSELAGE LEFT SIDE & DOUBLER
NOT SHOWN THIS VIEW.

*NOTE: ALL PARTS Balsa UNLESS OTHERWISE NOTED.

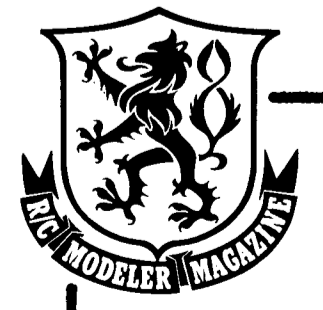

© RCM ALL COMMERCIAL RIGHTS RESERVED

SEMPERFI

DESIGNED & DRAWN BY: L.F. RANDOLPH
TRACED IN INK BY: S.A. PATTERSON

