

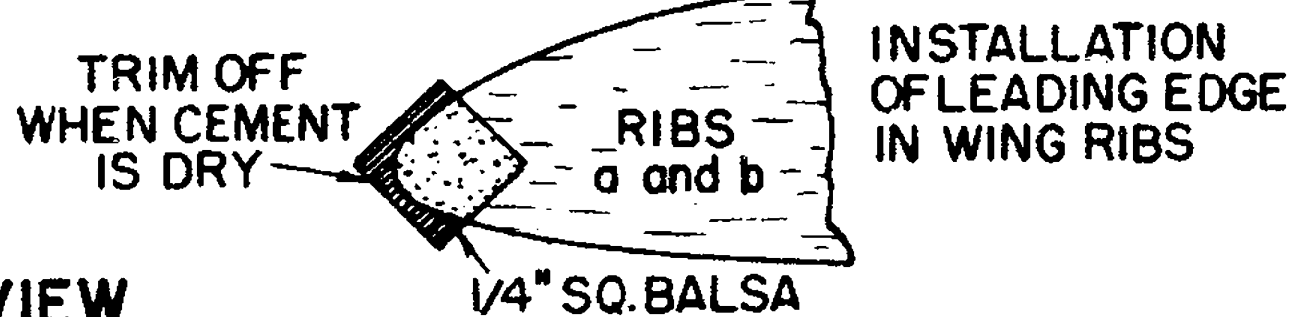
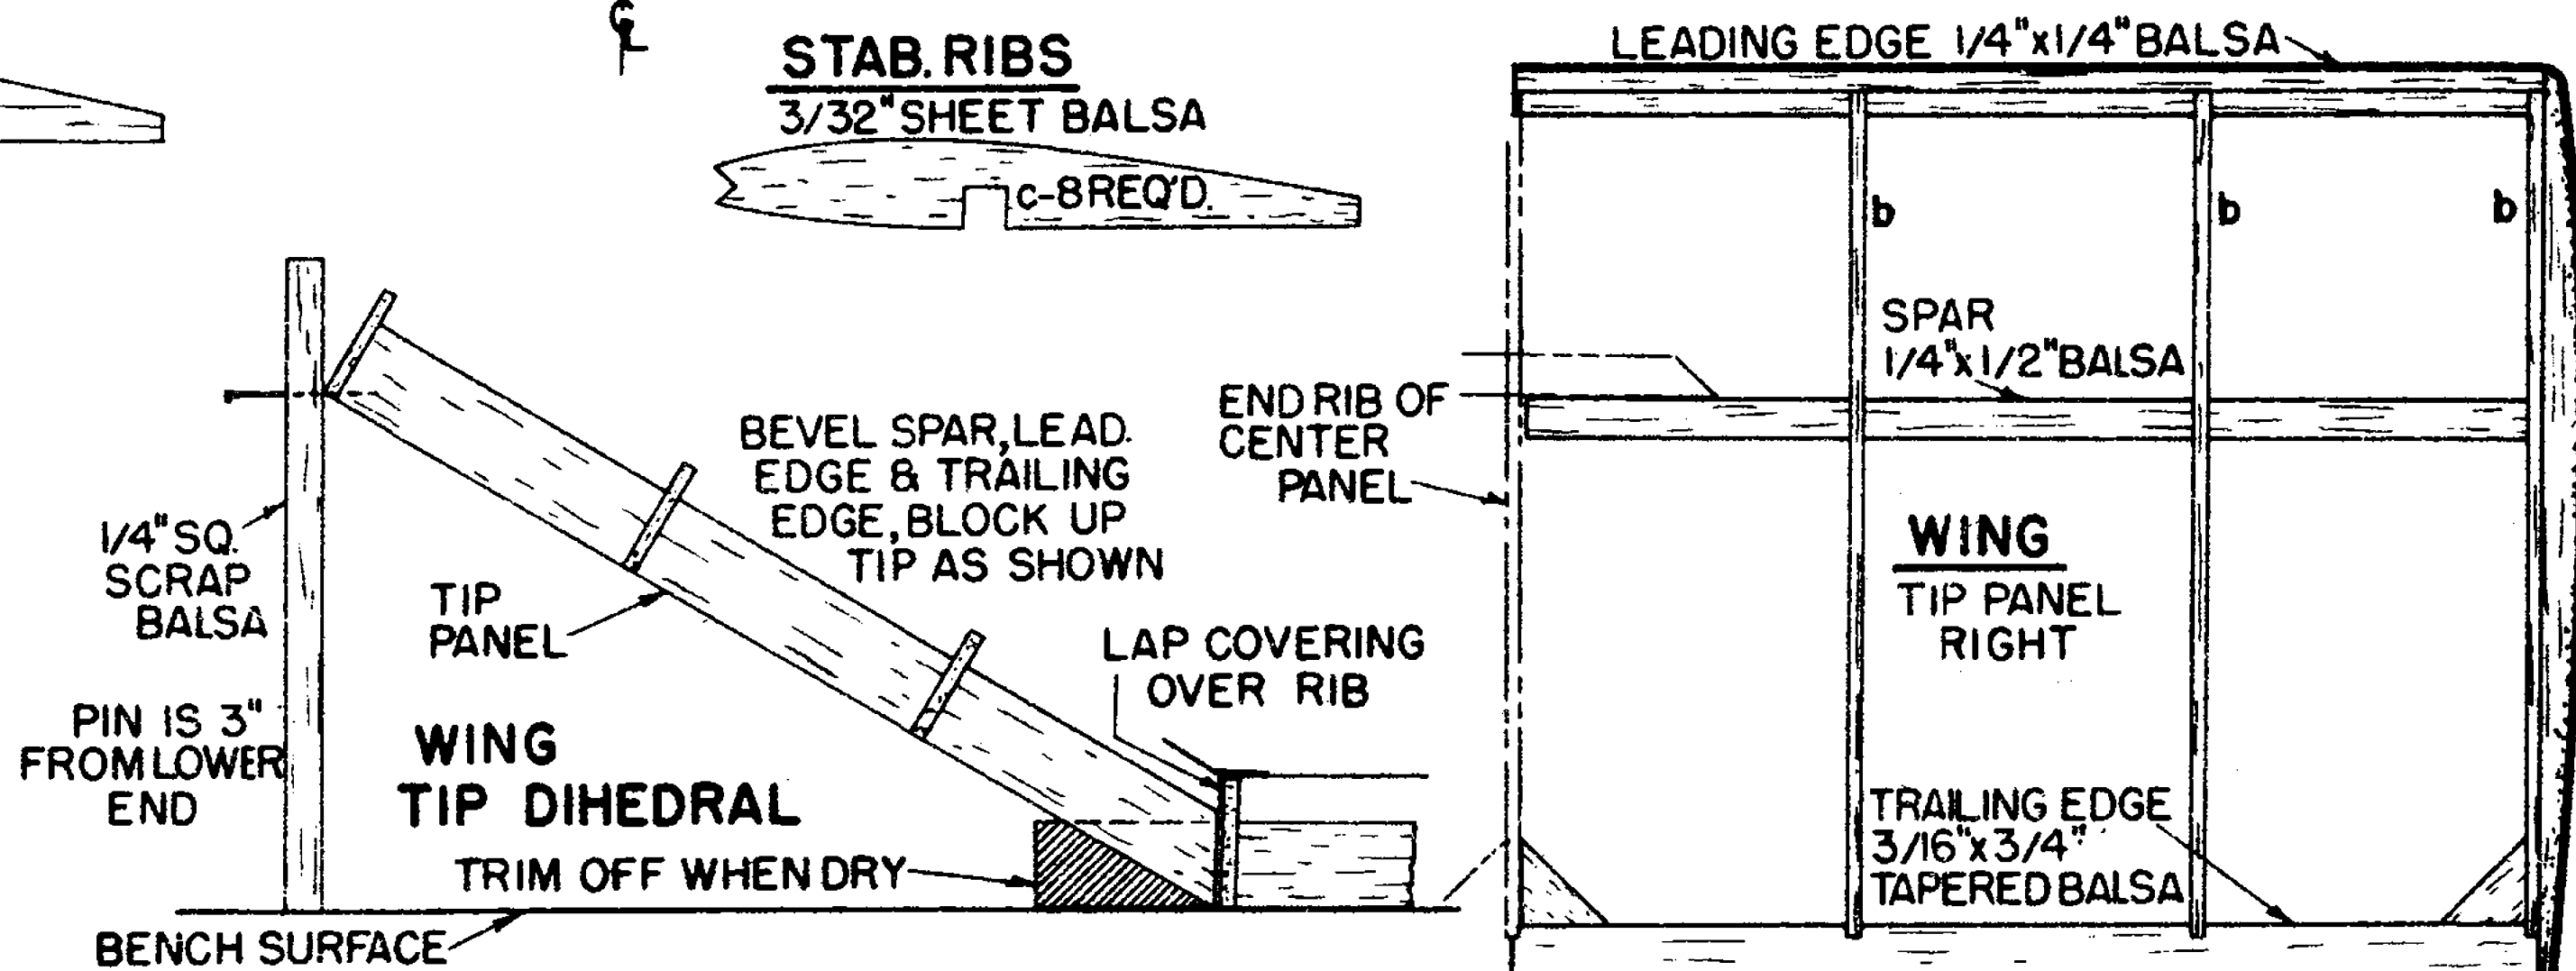
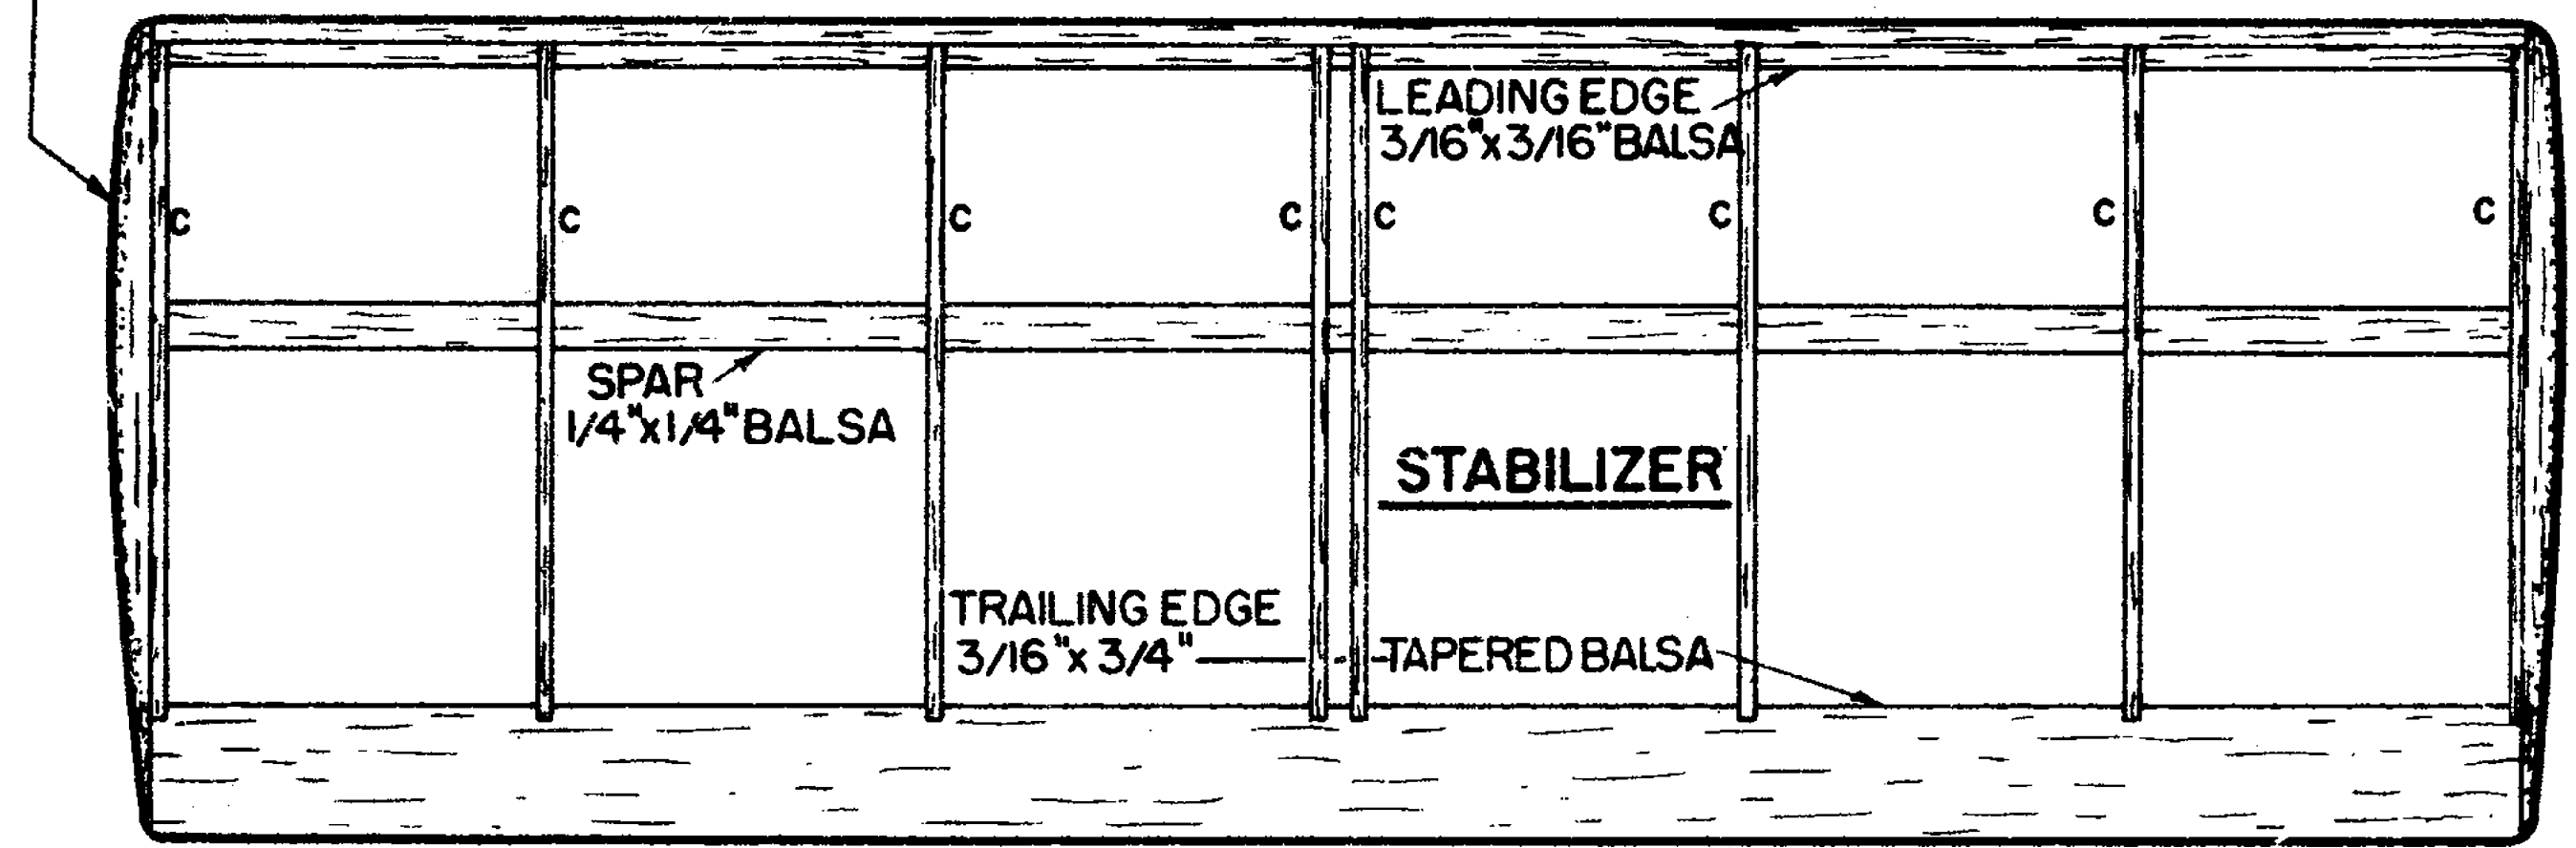



TIPS ARE SCRAP 1/4" SH. BALSAL

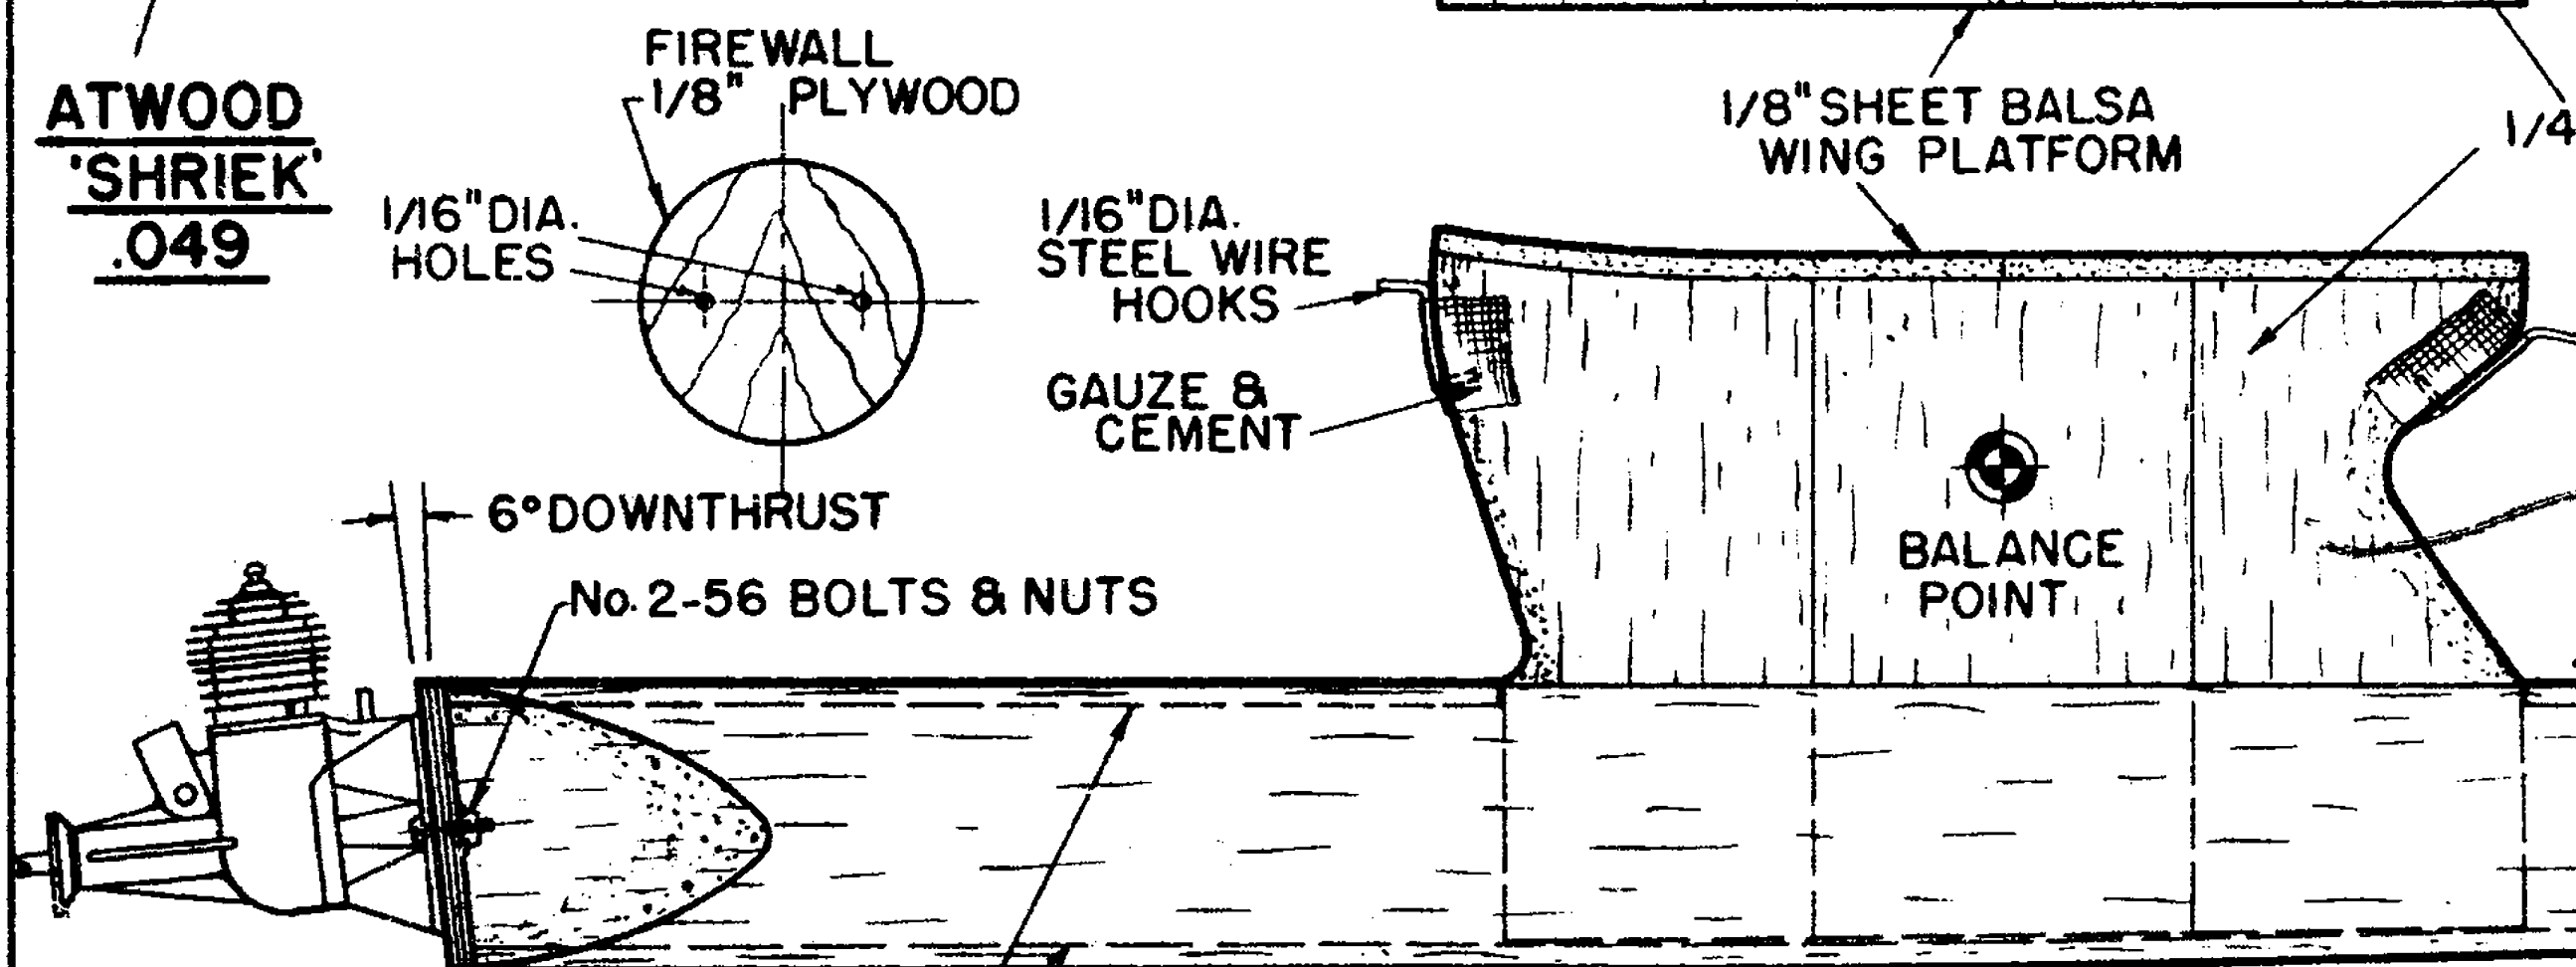

CHEEK BLOCKS 1/4" SHEET BALSAL INSTALL AFTER ENGINE IS MOUNTED

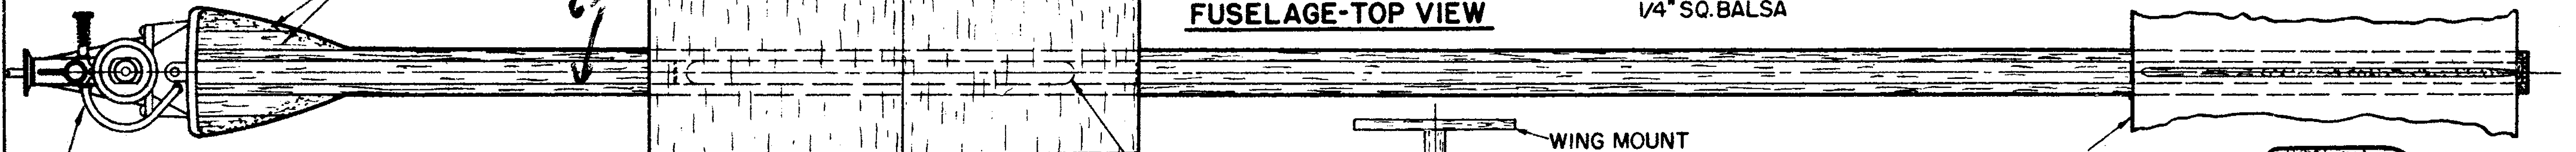

NOTE: TO BALANCE MODEL, LOCATE PYLON AS DESCRIBED IN THE BUILDING INSTRUCTIONS

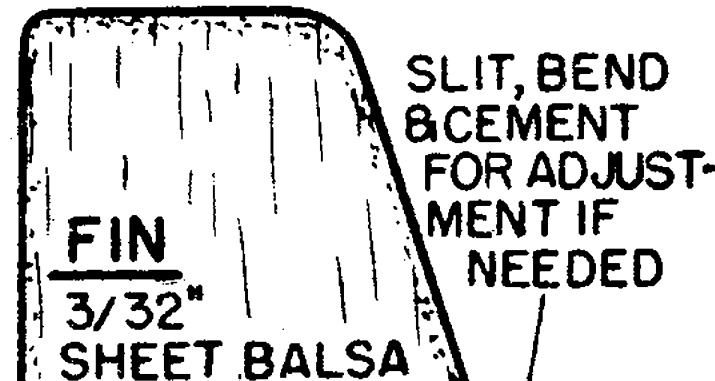

DORSAL 3/32" SH. BALSAL

HALF-A 'TENDERFOOT' by: RON ST. JEAN

drawn by: Ed Hulke

