
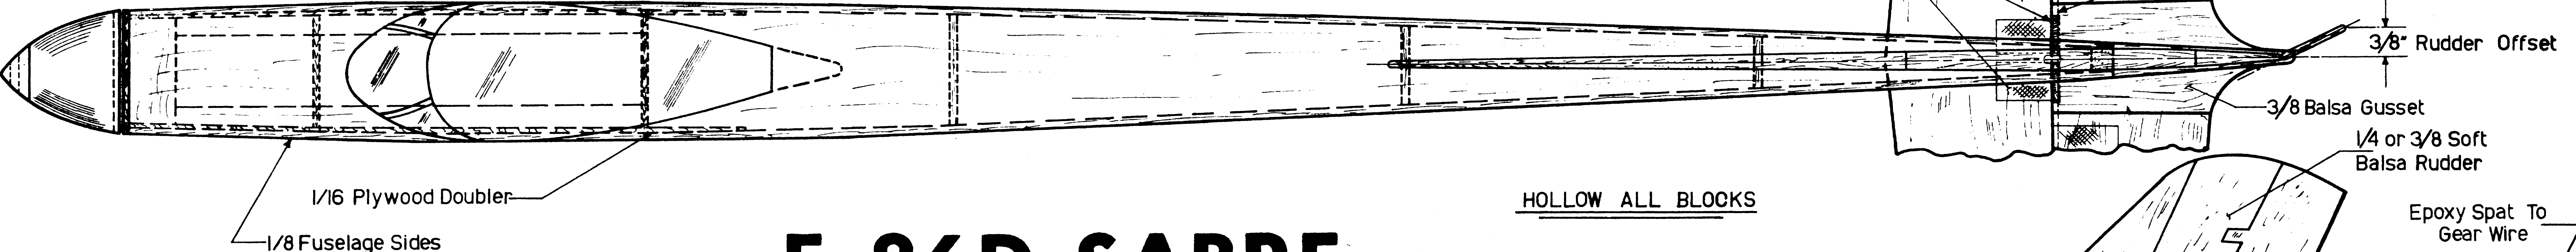


- A) Make Plywood Templates Of W1 And W14(i).
- B) Stack (11) 10"x2"x3/32" Balsa Strips And (1) 1/8" Plywood Strip Between Templates And Sand Ribs To Shape. (This Will Make Ribs W2(i) Thru W13(i))
- C) Cut Out W1, W14(i), And W13(o) Directly From Templates
- D) Use Same Procedure For Outboard Wing As Noted In 'B'; Only Use (1) Less Balsa Strip.
- E) W1 Must Be Cut Out As shown To Allow Bellcrank To Work Freely.

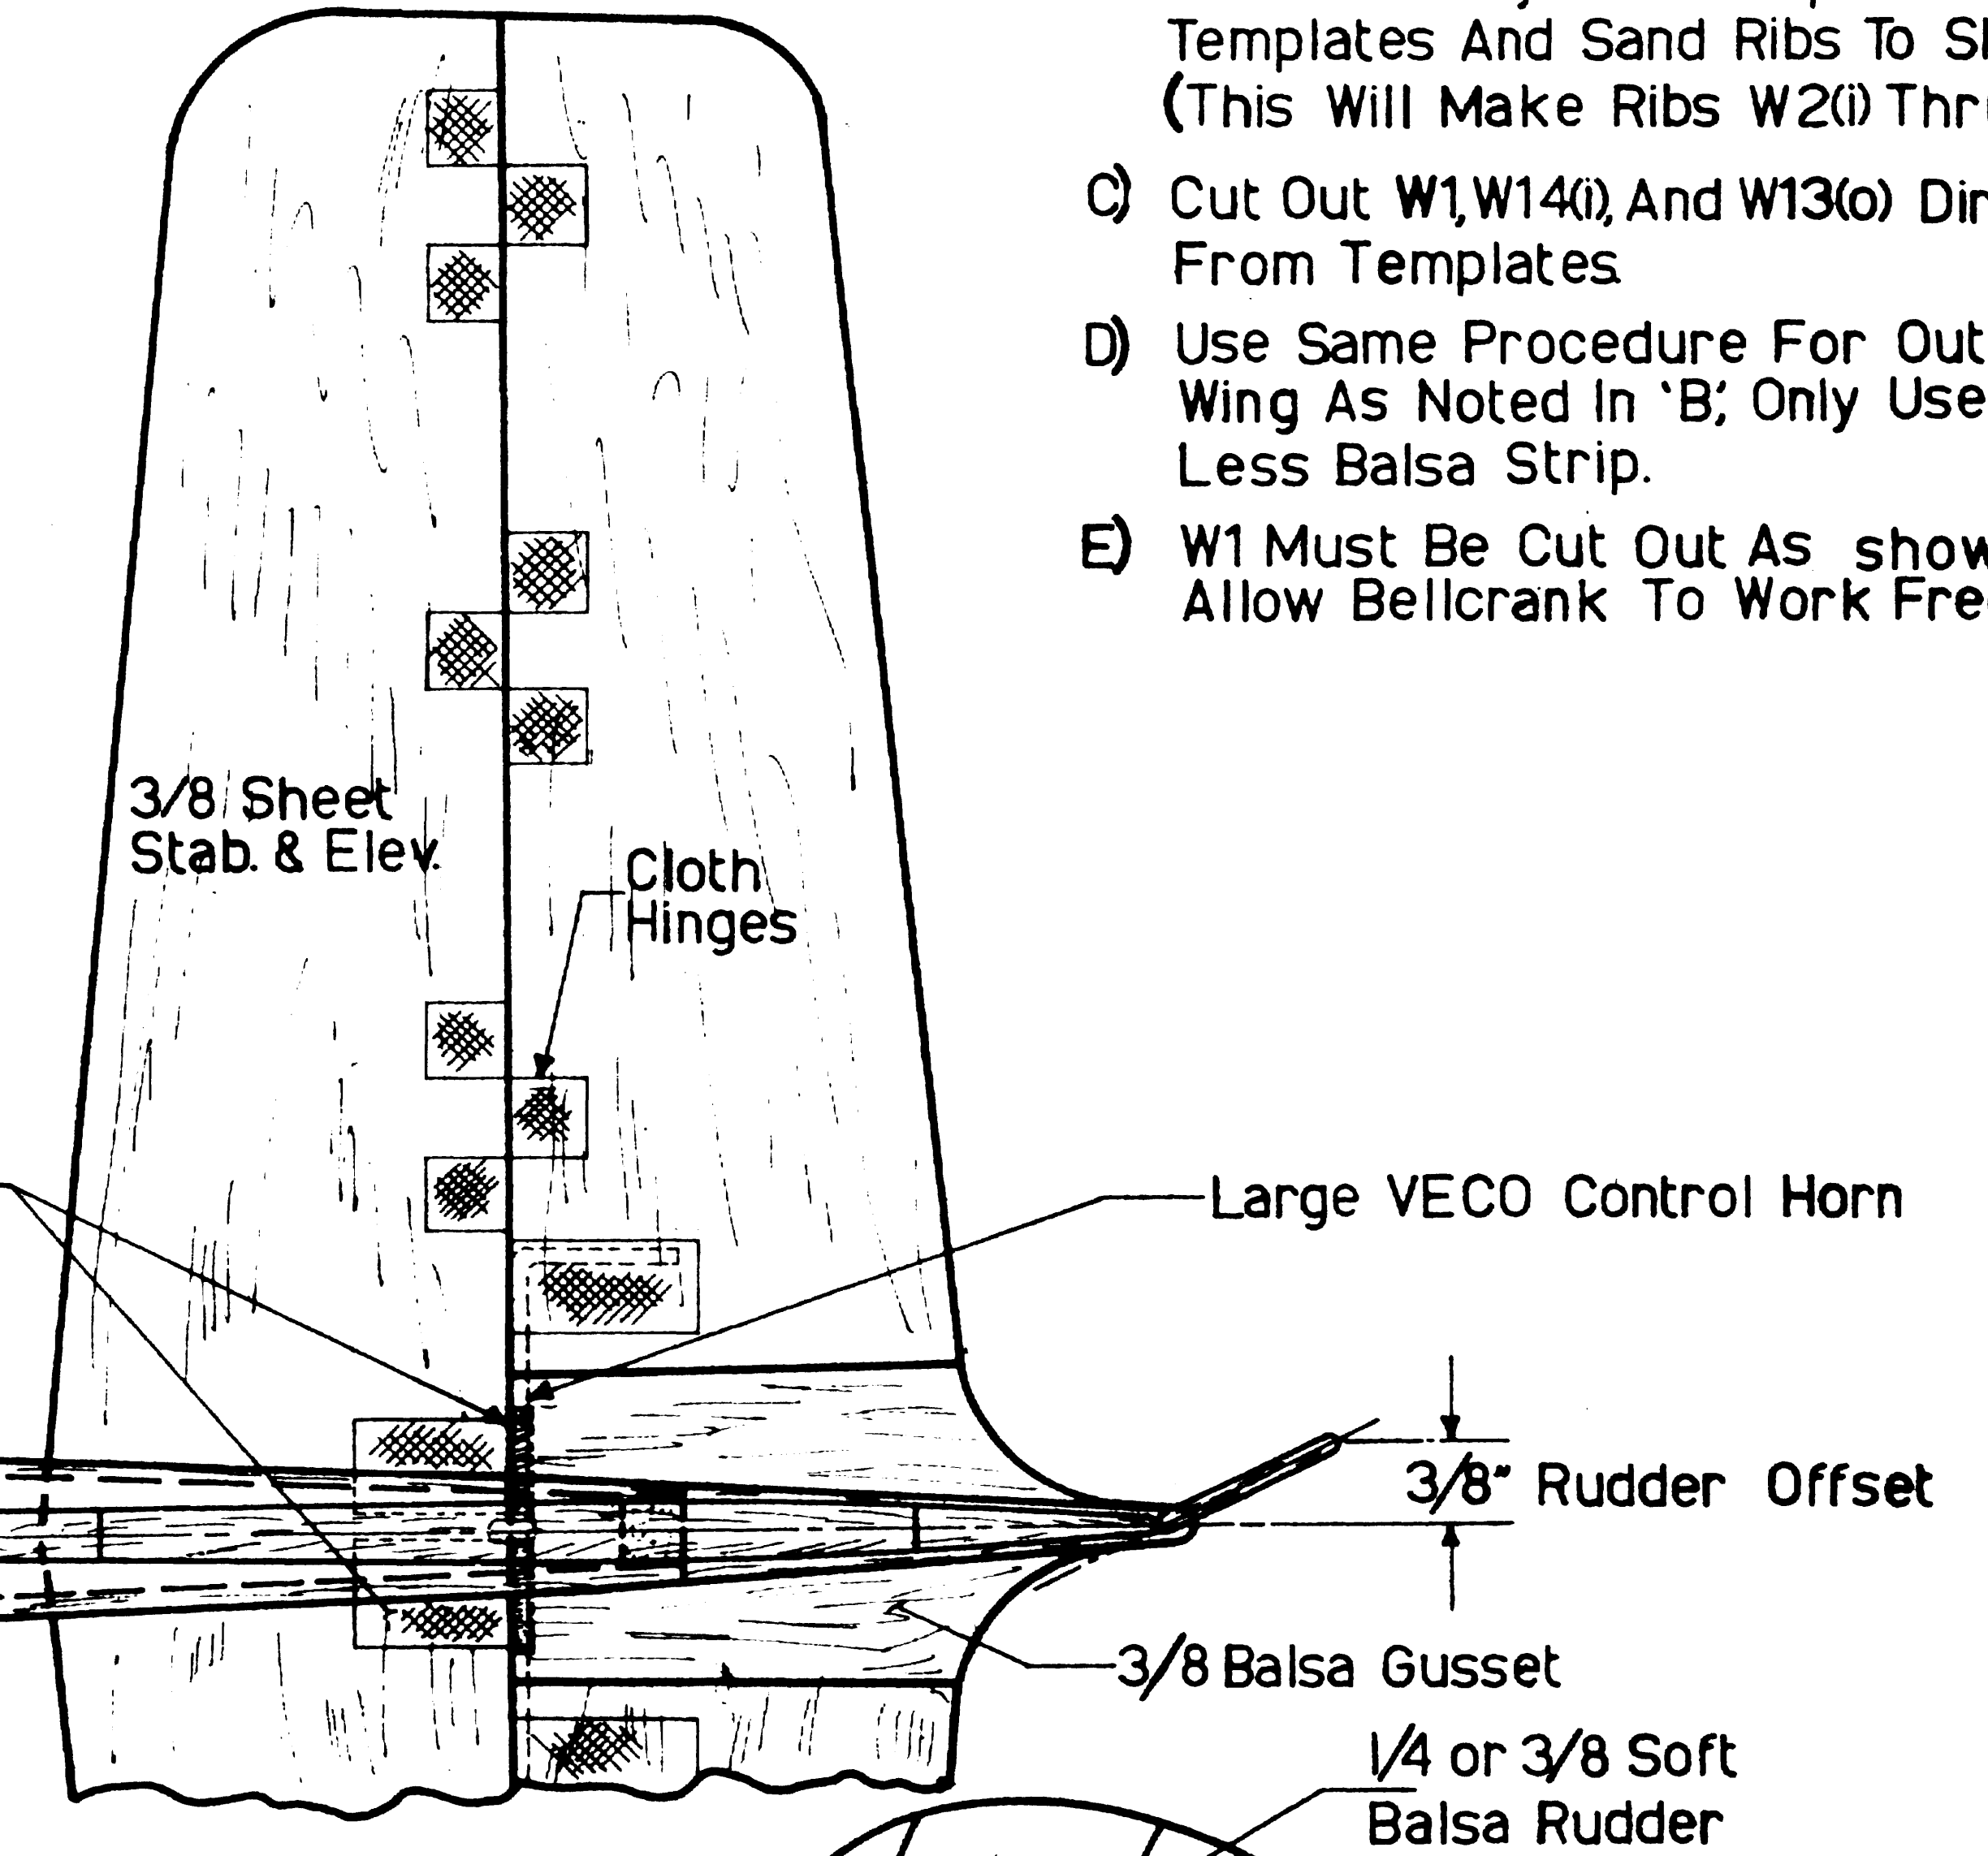

F-86D SABRE

SEMI-SCALE STUNTER

Designed by R.E. LAMPIONE
 Drawn and inked by Paul Simon

