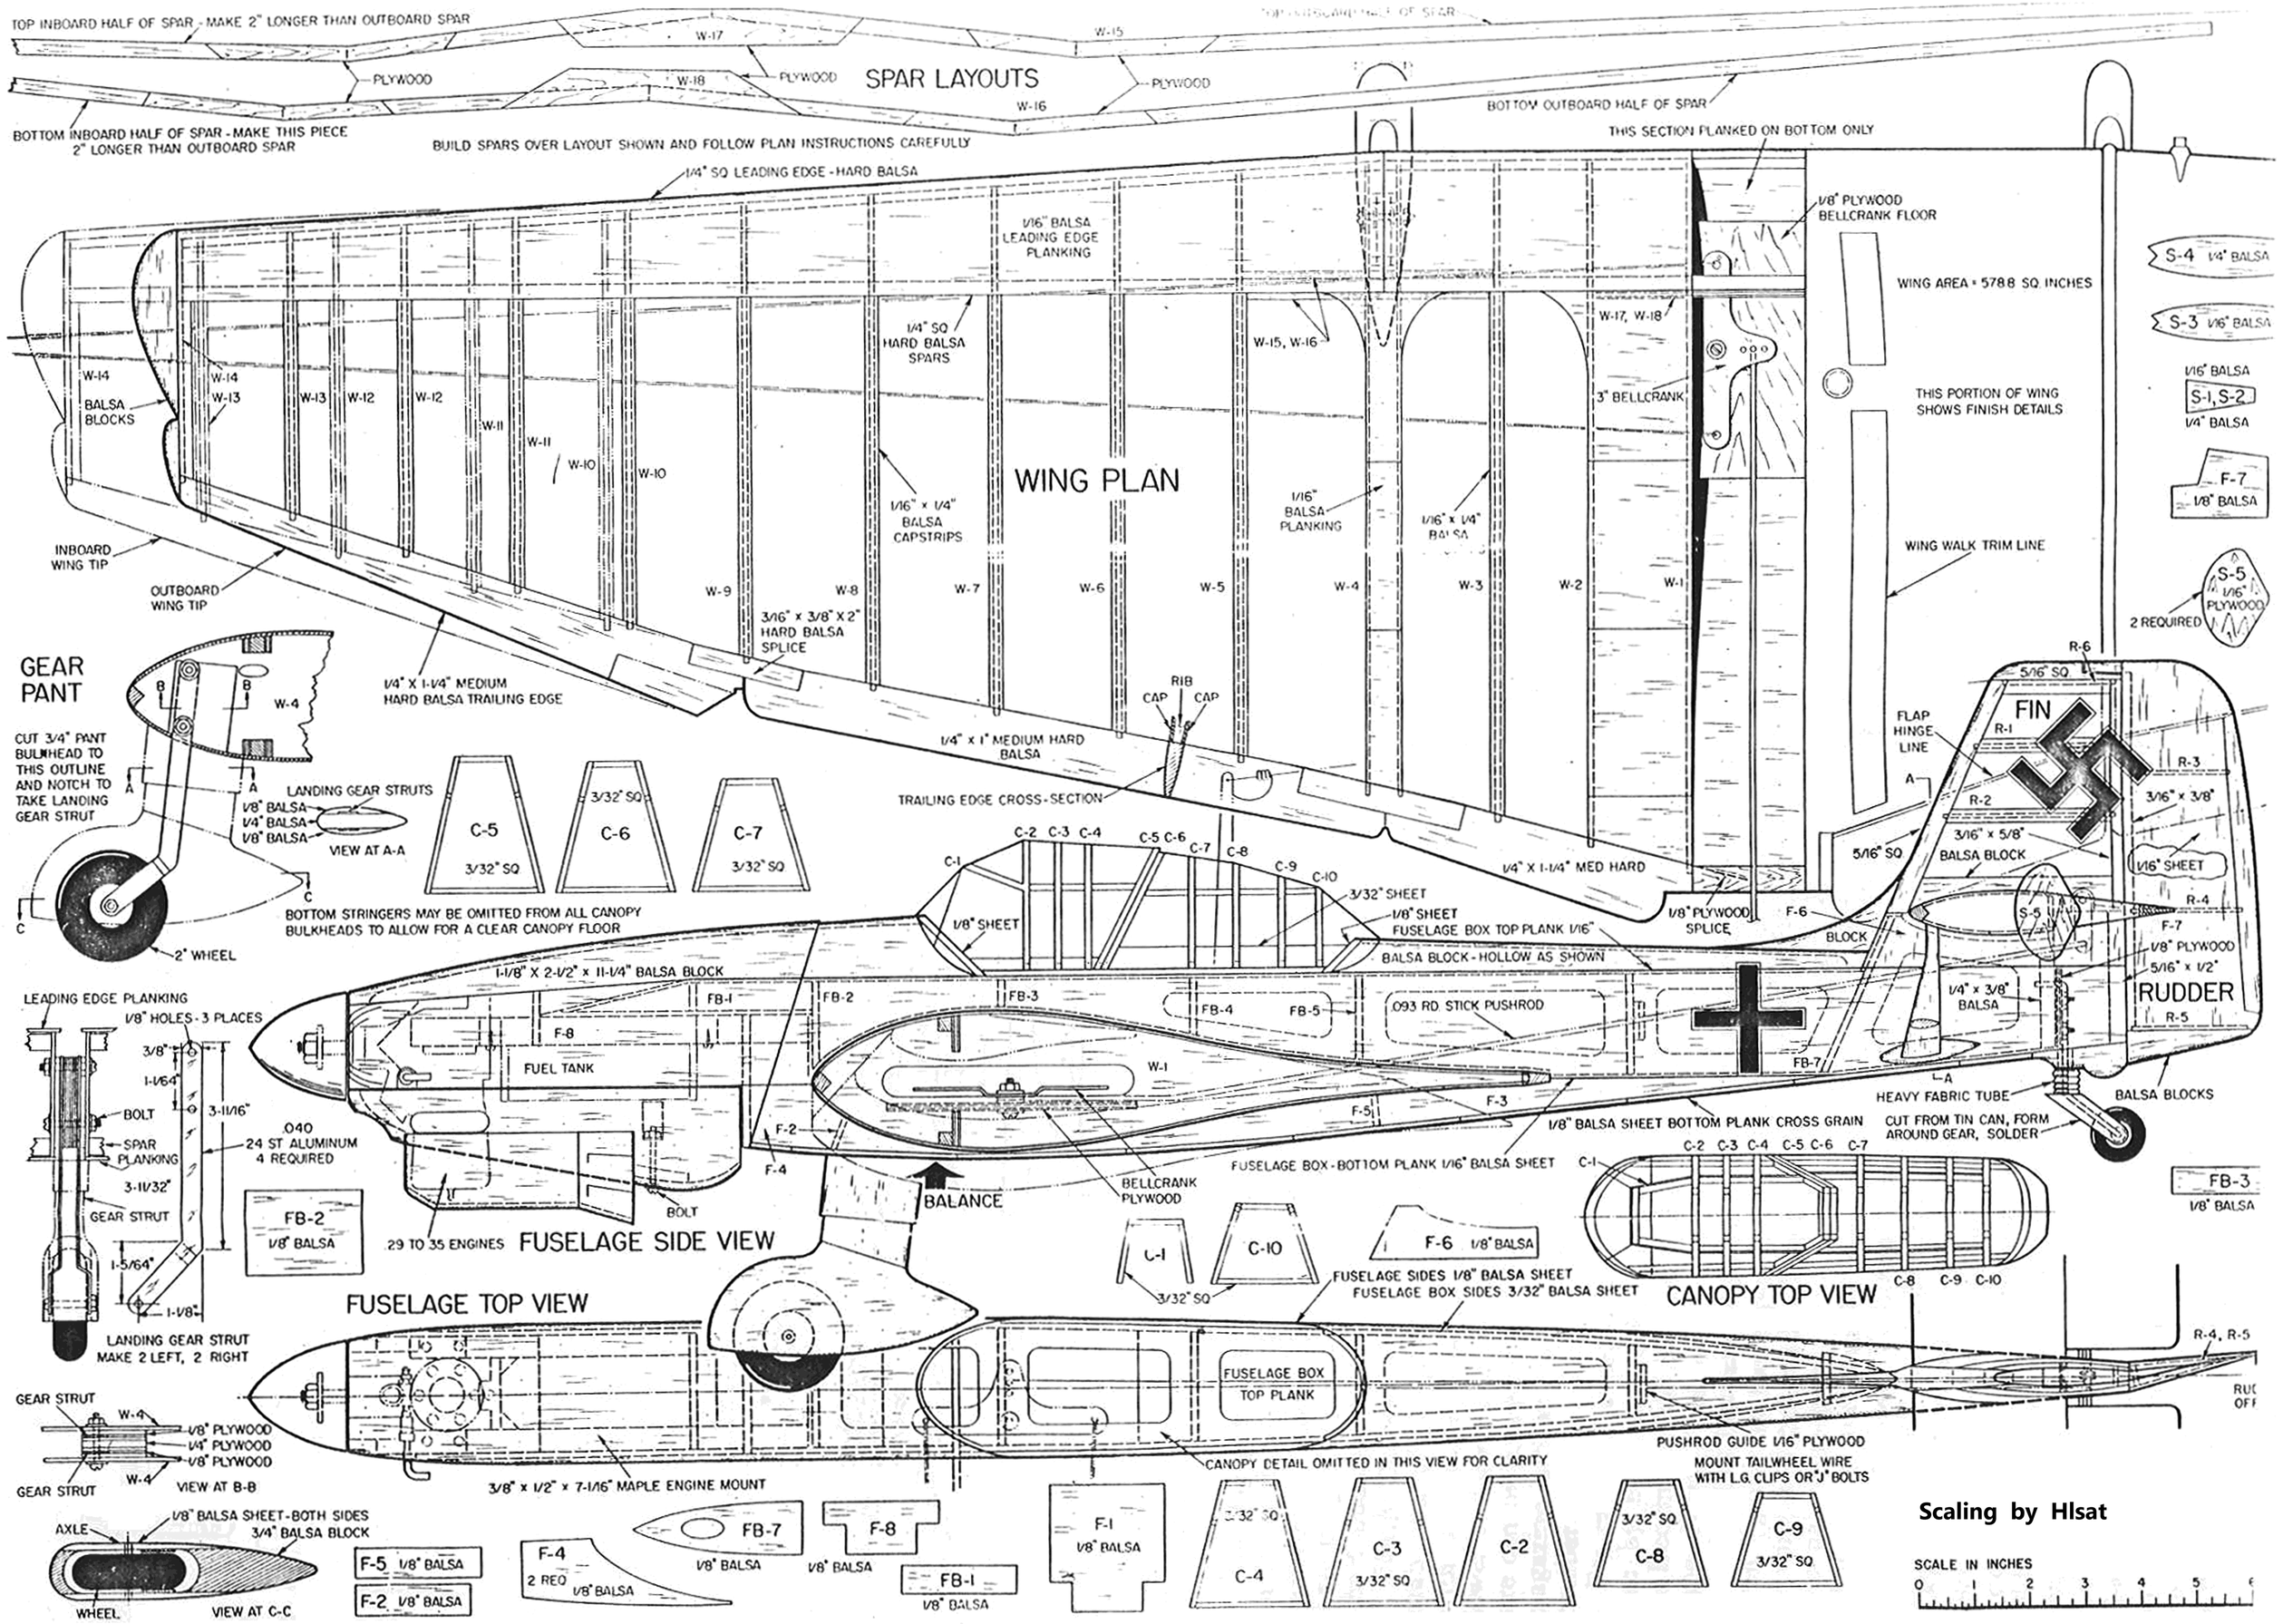

Scaling by Hlsat

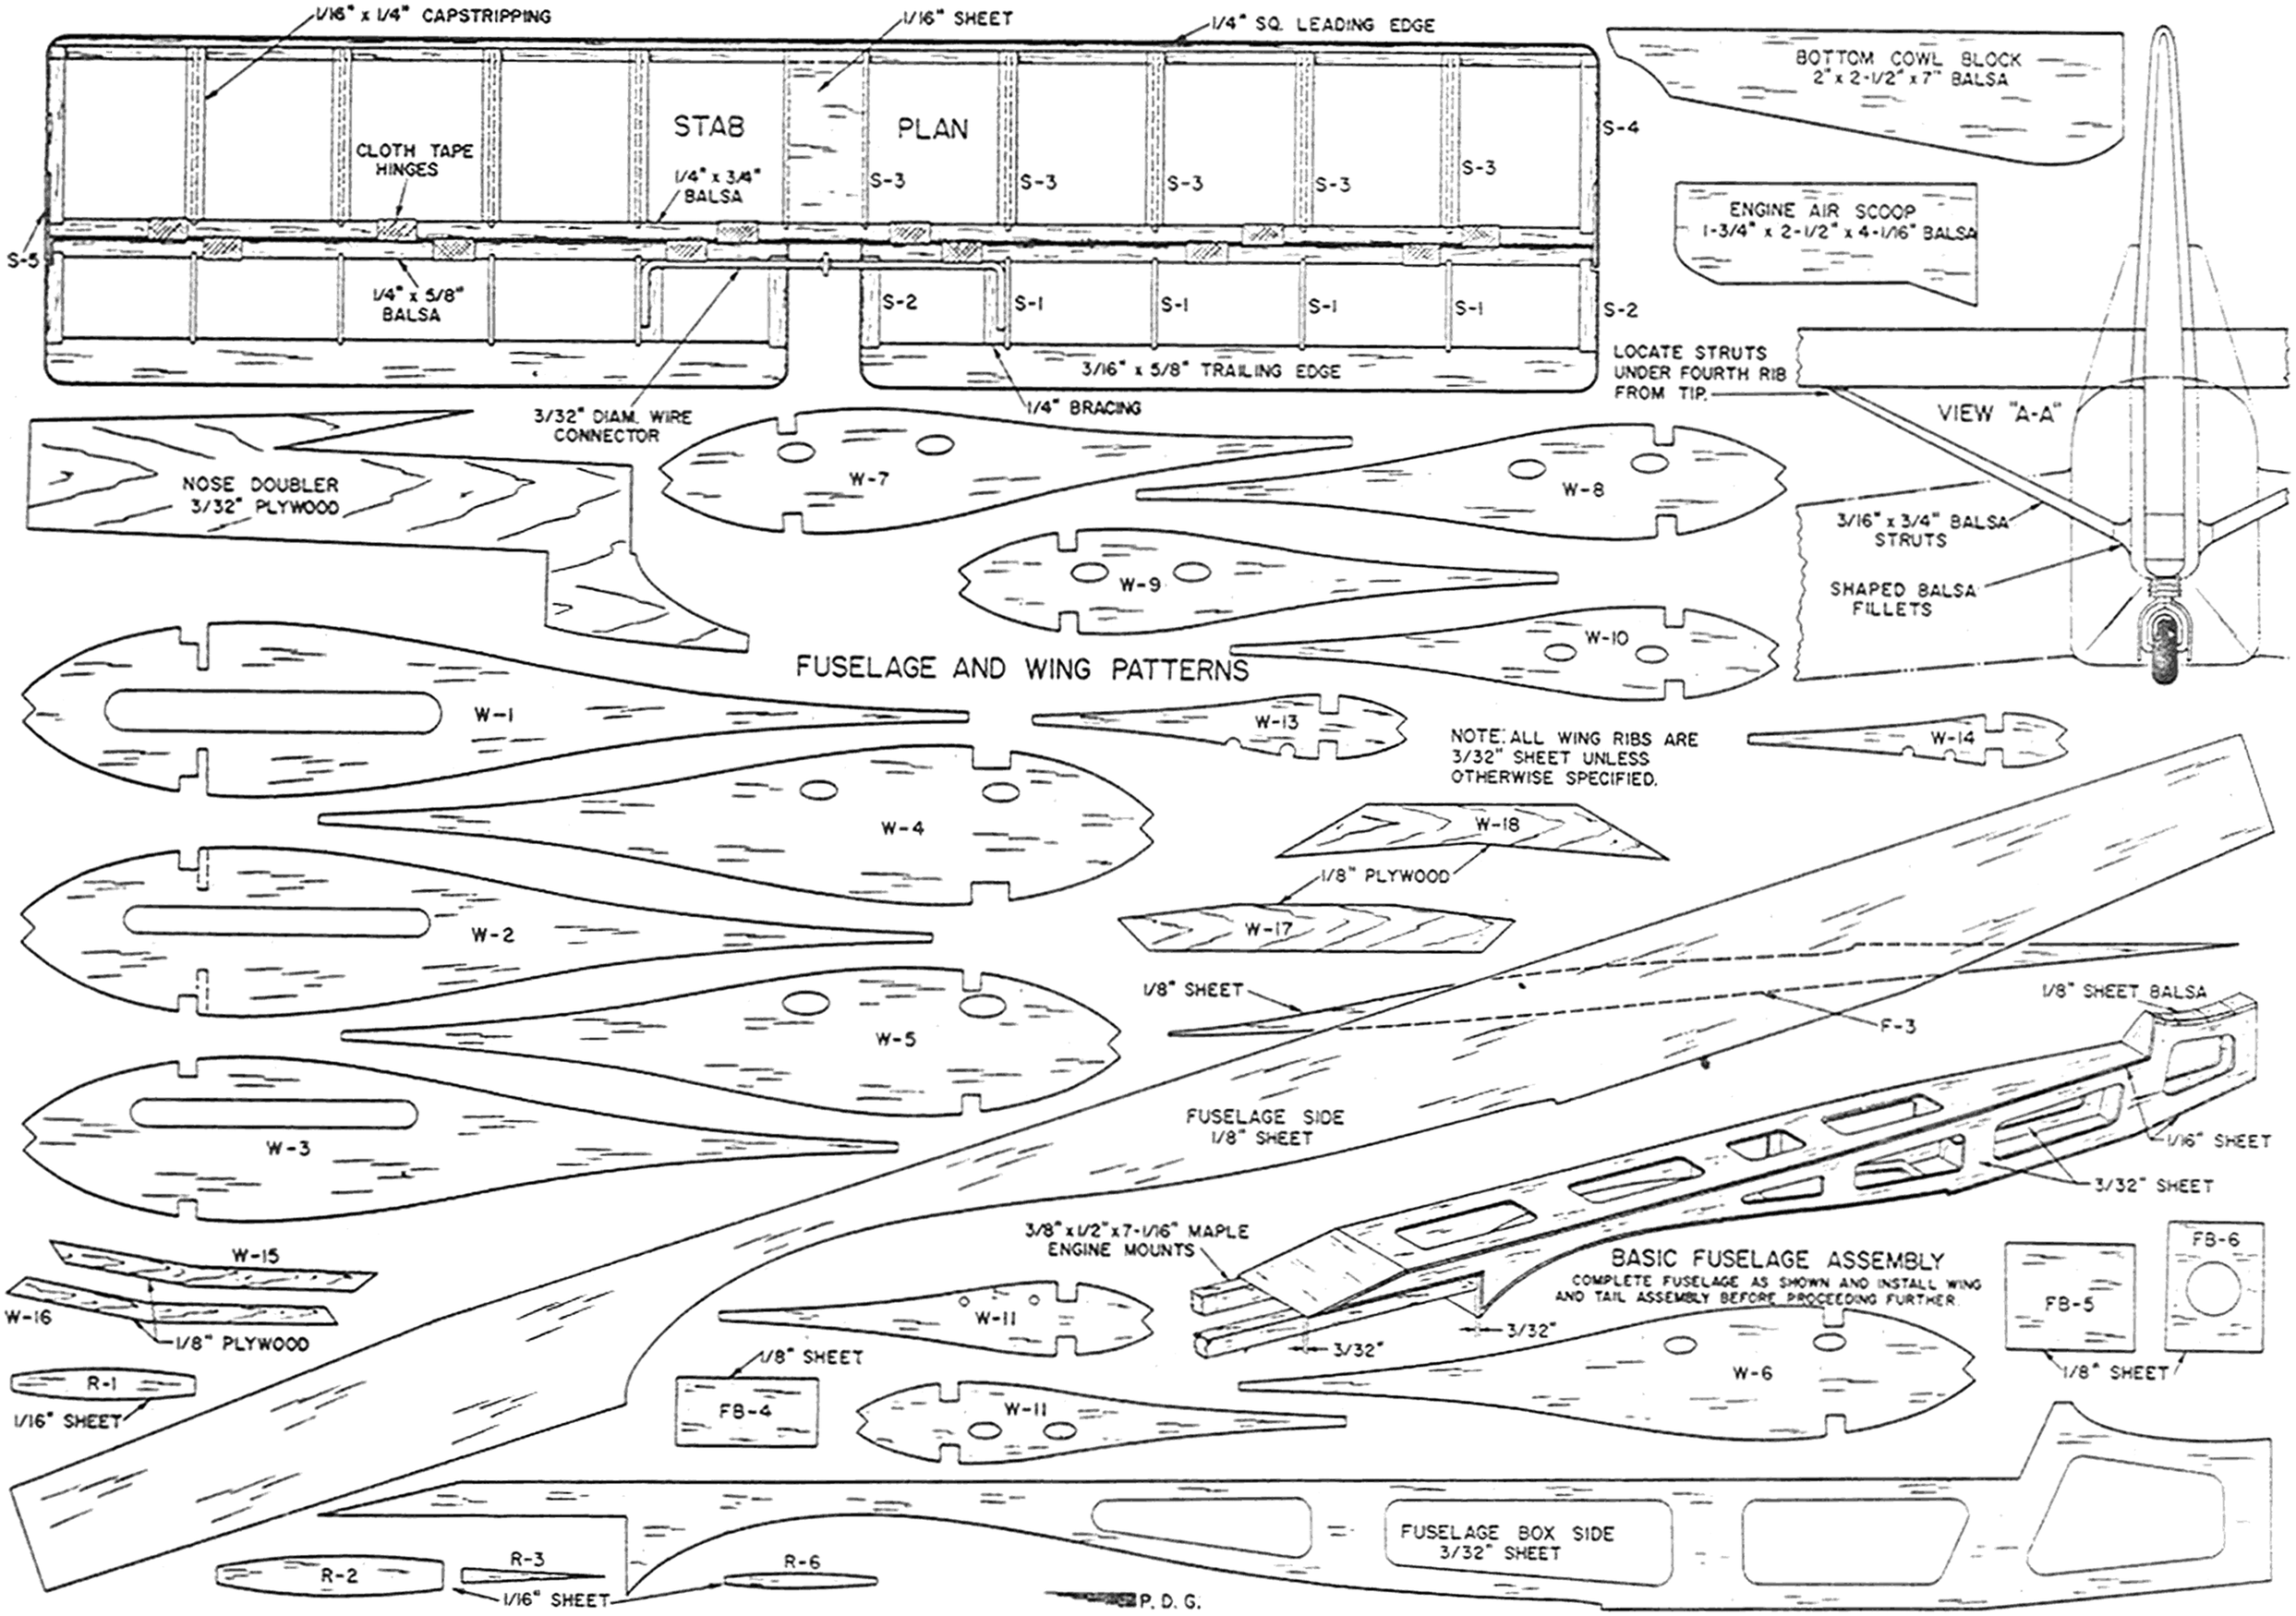
1/16" x 1/4" CAPSTRIPPING
1/16" SHEET
1/4" SQ. LEADING EDGE
STAB
PLAN
CLOTH TAPE HINGES
1/4" x 3/4" BALSA
1/4" x 5/8" BALSA
S-5
S-4
S-3
S-2
S-1
3/16" x 5/8" TRAILING EDGE
1/4" BRACING
3/32" DIAM. WIRE CONNECTOR
BOTTOM COWL BLOCK 2" x 2-1/2" x 7" BALSA
ENGINE AIR SCOOP 1-3/4" x 2-1/2" x 4-1/16" BALSA
LOCATE STRUTS UNDER FOURTH RIB FROM TIP.
VIEW "A-A"
3/16" x 3/4" BALSA STRUTS
SHAPED BALSA FILLETS
NOSE DOUBLER 3/32" PLYWOOD
W-7
W-8
W-9
W-10
FUSELAGE AND WING PATTERNS
W-1
W-13
W-14
NOTE: ALL WING RIBS ARE 3/32" SHEET UNLESS OTHERWISE SPECIFIED.
W-4
W-18
1/8" PLYWOOD
W-17
W-2
1/8" SHEET
F-3
1/8" SHEET BALSA
W-5
FUSELAGE SIDE 1/8" SHEET
W-3
1/16" SHEET
3/32" SHEET
3/8" x 1/2" x 7-1/16" MAPLE ENGINE MOUNTS
BASIC FUSELAGE ASSEMBLY
COMPLETE FUSELAGE AS SHOWN AND INSTALL WING AND TAIL ASSEMBLY BEFORE PROCEEDING FURTHER.
FB-6
FB-5
W-15
W-16
1/8" PLYWOOD
W-11
3/32"
3/32"
1/8" SHEET
W-6
R-1
1/16" SHEET
FB-4
W-11
FUSELAGE BOX SIDE 3/32" SHEET
R-2
R-3
1/16" SHEET
R-6
P. D. G.